



,Notification triggered' here is independent whether there is actually a Notification assigned.

The ,Notification triggered' entry in the Messages/Errors Log is only written if a Notification is assigned.

,LASTSTATUS' is an internal variable that is used in the ,Latency Check' subroutine (see below)

,STATUS' is the current status of the Sensor which is also displayed in the ,Messages/Errors' Log

Latency (LASTSTATUS) means the value for the currently active Latency which is dependent of the LASTSTATUS variable



